

mLink Library Reference Guide for
mLink 1,2 & 4 Channel Relay Module
(HCMODU0182, HCMODU0183, &
HCMODU0184)

Version: 1.10

REVISIONS

Date	Version	Details
7th Oct 2021	V1.00	Initial release
24th Mar 2025	V1.10	Updated for firmware version 1.01


Installing the mLink library

Adding the mLink library to your Arduino IDE can be done in the same way as any other Arduino library:


First download the mLink.zip file from the software section of our support forum here:

<https://hobbycomponents.com/mLink>

Once downloaded, open up your Arduino IDE and go to Sketch->Include Library->Add .ZIP Library.

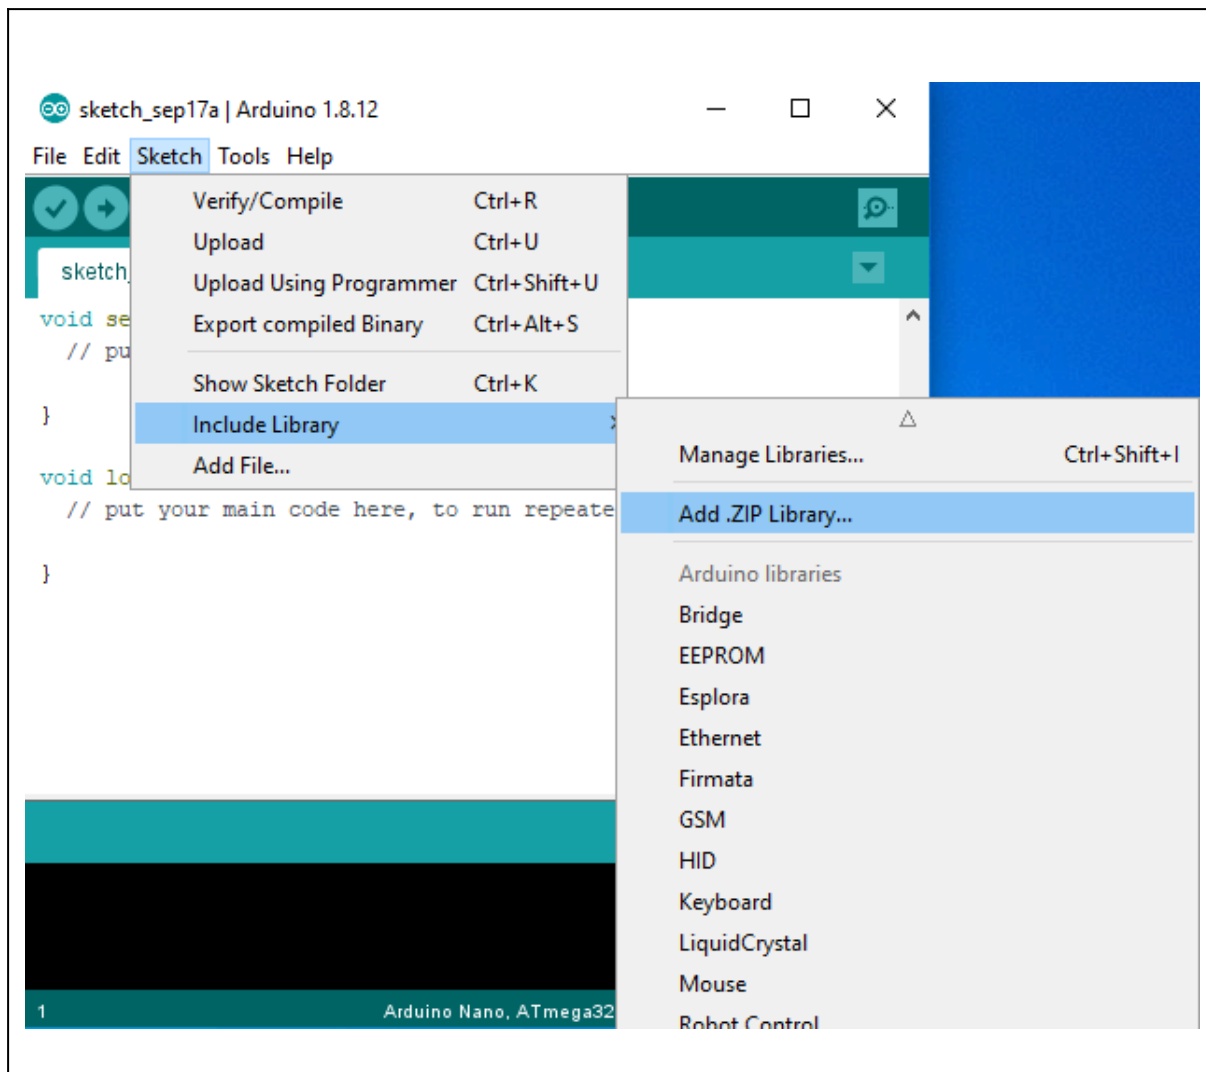

In the file selection dialogue window that opens, navigate to wherever you downloaded the mLink .zip file and select it, then click the 'Open' button.

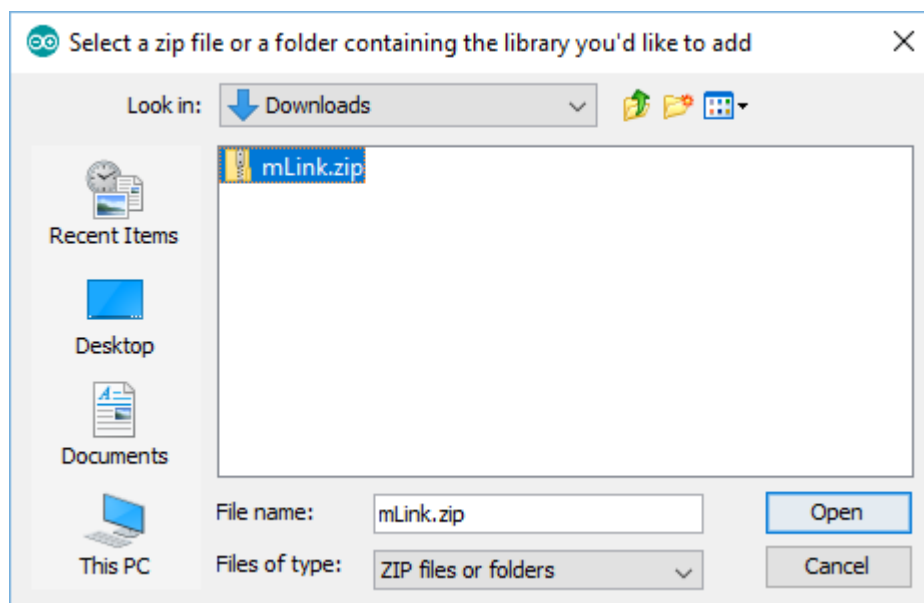

Including the mLink library in your sketch

Adding the mLink library to your sketch consists of 3 steps; Firstly include the mLink header file (mLink.h) at the top of your sketch, create an instance of the library, then finally initialise the library inside the startup() function:

```
// Step 1: Include the mLink library
#include "mLink.h"

//Step 2: Create an instance of the library
mLink mLink;

void setup()
{
  // Step 3: Initialise the library
  mLink.init();
}

void loop()
{
}
```

Quick library reference table

COMMAND		PARAMETERS	RETURNS
init()	Initialises the mLink library	None	n/a
readBit(<i>add, reg, bit</i>)	Reads the state of a bit from one of the mLink registers	<i>add</i> = byte value containing I2C address of mLink module <i>reg</i> = byte value containing register index <i>bit</i> = byte value containing the bit number to read (0 to 7)	<i>boolean</i> value containing the state of the bit
read(<i>add, reg</i>)	Reads the contents of one of the mLink registers	<i>add</i> = byte value containing I2C address of mLink module <i>reg</i> = byte value containing register index	<i>byte</i> value containing the state of the register
writeBit(<i>add, reg, bit, state</i>)	Writes to a bit in one of the mLink registers	<i>add</i> = byte value containing I2C address of mLink module <i>reg</i> = byte value containing register index <i>bit</i> = byte value containing the bit number to write to (0 to 7) <i>state</i> = boolean value to set the bit to	n/a
write(<i>add, reg, data</i>)	Writes data to one of the mLink registers	<i>add</i> = byte value containing I2C address of mLink module <i>reg</i> = byte value containing register index <i>data</i> = byte value containing the data to write to the register	n/a
SET_RLY0(<i>add, state</i>);	Library macro that sets the state of relay 0	<i>add</i> = byte value containing I2C address of mLink module <i>state</i> = boolean value containing the required state of the relay	n/a
SET_RLY1(<i>add, state</i>);	Library macro that sets the state of relay 1	<i>add</i> = byte value containing I2C address of mLink module <i>state</i> = <i>boolean</i> value containing the required state of the relay	n/a
SET_RLY2(<i>add, state</i>);	Library macro that sets the state of relay 2	<i>add</i> = byte value containing I2C address of mLink module <i>state</i> = boolean value containing the required state of the relay	n/a
SET_RLY3(<i>add, state</i>);	Library macro that sets the state of relay 3	<i>add</i> = byte value containing I2C address of mLink module <i>state</i> = <i>boolean</i> value containing the required state of the relay	n/a

READ_RLY0(<i>add</i>)	Library macro that gets the current state of relay 0	<i>add</i> = <i>byte</i> value containing I2C address of mLink module	<i>boolean</i> value containing the state of relay 0
READ_RLY1(<i>add</i>)	Library macro that gets the current state of relay 1	<i>add</i> = <i>byte</i> value containing I2C address of mLink module	<i>boolean</i> value containing the state of relay1
READ_RLY2(<i>add</i>)	Library macro that gets the current state of relay 2	<i>add</i> = <i>byte</i> value containing I2C address of mLink module	<i>boolean</i> value containing the state of relay 2
READ_RLY3(<i>add</i>)	Library macro that gets the current state of relay 3	<i>add</i> = <i>byte</i> value containing I2C address of mLink module	<i>boolean</i> value containing the state of relay 3
RLY0_SetOnTime(<i>add, time</i>)	Library macro that sets the on time for relay 0 in seconds	<i>add</i> = <i>byte</i> value containing I2C address of mLink module <i>time</i> = unsigned int value containing the on time in seconds	n/a
RLY1_SetOnTime(<i>add, time</i>)	Library macro that sets the on time for relay 1 in seconds	<i>add</i> = <i>byte</i> value containing I2C address of mLink module <i>time</i> = unsigned int value containing the on time in seconds	n/a
RLY2_SetOnTime(<i>add, time</i>)	Library macro that sets the on time for relay 2 in seconds	<i>add</i> = <i>byte</i> value containing I2C address of mLink module <i>time</i> = unsigned int value containing the on time in seconds	n/a
RLY3_SetOnTime(<i>add, time</i>)	Library macro that sets the on time for relay 3 in seconds	<i>add</i> = <i>byte</i> value containing I2C address of mLink module <i>time</i> = unsigned int value containing the on time in seconds	n/a
RLY_ON(<i>add, index</i>)	Library macro that turns on a relay (FW >V1.01)	<i>add</i> = <i>byte</i> value containing I2C address of mLink module <i>index</i> = <i>byte</i> value containing the index of the relay	n/a
RLY_OFF(<i>add, index</i>)	Library macro that turns off a relay (FW >V1.01)	<i>add</i> = <i>byte</i> value containing I2C address of mLink module <i>index</i> = <i>byte</i> value containing the index of the relay	n/a
RLY0_TIMER_RES(<i>add, res</i>)	Library macro that sets the relay 0 on timer resolution	<i>add</i> = <i>byte</i> value containing I2C <i>res</i> = <i>boolean</i> value containing required timer resolution	n/a
RLY1_TIMER_RES(<i>add, res</i>)	Library macro that sets the relay 1 on timer resolution	<i>add</i> = <i>byte</i> value containing I2C <i>res</i> = <i>boolean</i> value containing required timer resolution	n/a
RLY2_TIMER_RES(<i>add, res</i>)	Library macro that sets the relay 2 on timer resolution	<i>add</i> = <i>byte</i> value containing I2C <i>res</i> = <i>boolean</i> value containing required timer resolution	n/a

RLY3_TIMER_RES (<i>add, res</i>)	Library macro that sets the relay 3 on timer resolution	<i>add</i> = <i>byte</i> value containing I2C <i>res</i> = <i>boolean</i> value containing required timer resolution	n/a
---------------------------------------	---	---	-----

mLink 12bit Port Expander Library Commands

mLink.init()

Description

Initialises the mLink library

Add to the setup() section of your sketch to initialise the mLink library

Syntax

```
mLink.init()
```

Parameters

None

Returns

Nothing

Example Code

```
void setup()
{
  mLink.init();
}

void loop()
{
}
```

mLink.readBit(add, reg, bit)

Description

Reads the state of a bit from one of the mLink modules 8 bit registers and returns the result as a boolean value.

Parameters

add: byte value containing I2C address of mLink module. Alternatively, if the mLink module is set to its default I2C address (0x52) you can use the predefined value:

RLY_I2C_ADD

reg: byte value containing the register number to read. You can either specify the register number (see register table) or you can use one of the following predefined values:

MLINK_STATUS_REG
MLINK_RELAY_STATE_REG

bit: byte value containing the bit number within the specified register to read. Valid values are 0 to 7.

Returns

A boolean value representing the state of the bit.

Example Code

Reads the state of bit 0 (COM error bit) from the status register

```
boolean result = mLink.readBit(RLY_I2C_ADD, MLINK_STATUS_REG, 0);
```

mLink.read(*add*, *reg*)

Description

Reads the state of one of the mLink modules 8 bit registers and returns the result as a byte.

Parameters

add: byte value containing I2C address of mLink module. Alternatively, if the mLink module is set to its default I2C address (0x52) you can use the predefined value:

RLY_I2C_ADD

reg: byte value containing the register number to read. You can either specify the register number (see register table) or you can use one of the following predefined values:

MLINK_STATUS_REG
MLINK_ADD_REG
MLINK_MOD_TYPE_REG
MLINK_MOD_SUBTYPE_REG
MLINK_SW_VER_REG
MLINK_RELAY_STATE_REG

Returns

A byte value representing the state of the register.

Example Code

Reads the contents of the software version register (register 4)

```
byte result = mLink.read(RLY_I2C_ADD, MLINK_SW_VER_REG);
```

mLink.writeBit(*add, reg, bit, state*)

Description

Writes to a bit in one of the mLink modules 8 bit registers.

Parameters

add: byte value containing I2C address of mLink module. Alternatively if the mLink module is set to its default I2C address (0x50) you can use the predefined value:

RLY_I2C_ADD

reg: byte value containing the register number to write to. You can either specify the register number (see register table) or you can use one of the following predefined values:

MLINK_STATUS_REG
MLINK_RELAY_STATE_REG

bit: byte value containing the bit number within the specified register to write to. Valid values are 0 to 7.

state: boolean value containing the state to set the specified bit to.

Returns

None

Example Code

Energises relay 0 by setting the appropriate bit (bit 0) in the relay state register high..

```
mLink.writeBit(RLY_I2C_ADD, MLINK_RELAY_STATE_REG, 0, HIGH);
```

Alternatively in the above example of energising relay 0 you can use the RLY4CH_RLY0_ON definition to simplify the above command:

```
mLink.writeBit(RLY_I2C_ADD, RLY4CH_RLY0_ON);
```

mLink.write(*add*, *reg*, *data*)

Description

Writes to one of the mLink modules 8 bit registers.

Parameters

add: byte value containing I2C address of mLink module. Alternatively if the mLink module is set to its default I2C address (0x52) you can use the predefined value:

RLY_I2C_ADD

reg: byte value containing the register number to write to. You can either specify the register number (see register table) or you can use one of the following predefined values:

MLINK_STATUS_REG
MLINK_ADD_REG
MLINK_RELAY_STATE_REG

data: byte value containing the data to write to the register

Returns

None

Example Code

Energises relays 0 and 3 (on a 4 channel relay module) by writing to the MLINK_RELAY_STATE_REG register.

```
byte relayState = 0b1001;  
mLink.write(RLY_I2C_ADD, MLINK_RELAY_STATE_REG, relayState);
```

`mLink.SET_RLYx(add, state);`

Description

Library macros that set the state of one of the relays where:

<code>mLink.SET_RLY0(<i>add</i>, <i>state</i>);</code>	Sets the state of relay 0
<code>mLink.SET_RLY1(<i>add</i>, <i>state</i>);</code>	Sets the state of relay 1
<code>mLink.SET_RLY2(<i>add</i>, <i>state</i>);</code>	Sets the state of relay 2
<code>mLink.SET_RLY3(<i>add</i>, <i>state</i>);</code>	Sets the state of relay 3

Parameters

add: byte value containing I2C address of mLink module. Alternatively if the mLink module is set to its default I2C address (0x52) you can use the predefined value:

`RLY_I2C_ADD`

state: boolean value containing the required state of the relay where

0 = de-energized (off)

1 = energised (on)

Returns

None

Example Code

Energises relay 0

```
mLink.SET_RLY0(I2C_ADD, HIGH);
```

`mLink.READ_RLYx(add);`

Description

Library macro that reads the state of one of the relays where:

<code>mLink.READ_RLY0(<i>add</i>);</code>	Sets the state of relay 0
<code>mLink.READ_RLY1(<i>add</i>);</code>	Sets the state of relay 1
<code>mLink.READ_RLY2(<i>add</i>);</code>	Sets the state of relay 2
<code>mLink.READ_RLY3(<i>add</i>);</code>	Sets the state of relay 3

Parameters

add: byte value containing I2C address of mLink module. Alternatively if the mLink module is set to its default I2C address (0x52) you can use the predefined value:

`RLY_I2C_ADD`

Returns

boolean value containing the state of relay specified relay where
0 = relay de-energised (off)
1 = relay energised (on)

Example Code

Reads the current state of relay 0

```
boolean relayState = mLink.READ_RLY0(RLY_I2C_ADD);
```

mLink.RLYx_SetOnTime(*add*, *time*)

Description

Library macro that sets the on time of one of the relays where:

mLink.RLY0_SetOnTime(<i>add</i> , <i>time</i>);	Sets the on time of relay 0
mLink.RLY1_SetOnTime(<i>add</i> , <i>time</i>);	Sets the on time of relay 1
mLink.RLY2_SetOnTime(<i>add</i> , <i>time</i>);	Sets the on time of relay 2
mLink.RLY3_SetOnTime(<i>add</i> , <i>time</i>);	Sets the on time of relay 3

Parameters

add: byte value containing I2C address of mLink module. Alternatively if the mLink module is set to its default I2C address (0x52) you can use the predefined value:

RLY_I2C_ADD

time: unsigned integer value containing the required on time in seconds (default, see mLink.RLYx_RES()). Setting this value to 0 will disable the on timer mode. Maximum on time = 65535 seconds.

Returns

None

Example Code

Sets the on time for relay 0 to 10 seconds

```
boolean relayState = mLink.RLY0_SetOnTime(RLY_I2C_ADD, 10);
```


mLink.RLY_ON(*add*, *index*) (Firmware V1.01 and above)

Description

Library macro that turns on a relay.

Parameters

add: byte value containing I2C address of mLink module. Alternatively if the mLink module is set to its default I2C address (0x52) you can use the predefined value:

RLY_I2C_ADD

index: byte value this specifies the relay to turn on where:

- 0 = relay 0
- 1 = relay 1
- 2 = relay 2
- 3 = relay 4

Returns

None

Example Code

Turns on relay 3

```
mLink.RLY_ON(RLY_I2C_ADD, 3);
```

mLink.RLY_OFF(*add*, *index*) (Firmware V1.01 and above)

Description

Library macro that turns off a relay.

Parameters

add: byte value containing I2C address of mLink module. Alternatively if the mLink module is set to its default I2C address (0x52) you can use the predefined value:

RLY_I2C_ADD

index: byte value this specifies the relay to turn off where:

- 0 = relay 0
- 1 = relay 1
- 2 = relay 2
- 3 = relay 4

Returns

None

Example Code

Turns off relay 3

```
mLink.RLY_OFF(RLY_I2C_ADD, 3);
```

mLink.RLY0_TIMER_RES(*add*, *res*) (Firmware V1.01 and above)

Description

Library macro that sets the timer resolution for relay 0

Parameters

add: byte value containing I2C address of mLink module. Alternatively if the mLink module is set to its default I2C address (0x52) you can use the predefined value:

RLY_I2C_ADD

res: boolean value containing the resolution to set the timer to where:

0 or RLY_RES_1S	1 second resolution (default)
1 or RLY_RES_100MS	100ms resolution

Returns

None

Example Code

Sets the timer resolution for relay 0 to 100ms

```
mLink.RLY0_TIMER_RESF(RLY_I2C_ADD, 1);
```

mLink.RLY1_TIMER_RES(*add*, *res*) (Firmware V1.01 and above)

Description

Library macro that sets the timer resolution for relay 1

Parameters

add: byte value containing I2C address of mLink module. Alternatively if the mLink module is set to its default I2C address (0x52) you can use the predefined value:

RLY_I2C_ADD

res: boolean value containing the resolution to set the timer to where:

0 or RLY_RES_1S	1 second resolution (default)
1 or RLY_RES_100MS	100ms resolution

Returns

None

Example Code

Sets the timer resolution for relay 1 to 100ms

```
mLink.RLY0_TIMER_RESF(RLY_I2C_ADD, 1);
```

mLink.RLY2_TIMER_RES(*add*, *res*) (Firmware V1.01 and above)

Description

Library macro that sets the timer resolution for relay 2

Parameters

add: byte value containing I2C address of mLink module. Alternatively if the mLink module is set to its default I2C address (0x52) you can use the predefined value:

RLY_I2C_ADD

res: boolean value containing the resolution to set the timer to where:

0 or RLY_RES_1S	1 second resolution (default)
1 or RLY_RES_100MS	100ms resolution

Returns

None

Example Code

Sets the timer resolution for relay 2 to 100ms

```
mLink.RLY0_TIMER_RESF(RLY_I2C_ADD, 1);
```

mLink.RLY3_TIMER_RES(*add*, *res*) (Firmware V1.01 and above)

Description

Library macro that sets the timer resolution for relay 3

Parameters

add: byte value containing I2C address of mLink module. Alternatively if the mLink module is set to its default I2C address (0x52) you can use the predefined value:

RLY_I2C_ADD

res: boolean value containing the resolution to set the timer to where:

0 or RLY_RES_1S	1 second resolution (default)
1 or RLY_RES_100MS	100ms resolution

Returns

None

Example Code

Sets the timer resolution for relay 3 to 100ms

```
mLink.RLY0_TIMER_RESF(RLY_I2C_ADD, 1);
```

DISCLAIMER

The mLink range is a series of modules intended for the hobbyist and educational markets. Where every care has been taken to ensure the reliability and durability of this product it should not be used in safety or reliability critical applications.

This library and document is provided "as is". Hobby Components Ltd makes no warranties, whether express, implied or statutory, including, but not limited to, implied warranties of merchantability and fitness for a particular purpose, accuracy or lack of negligence. Hobby Components Ltd shall not, in any circumstances, be liable for any damages, including, but not limited to, special, incidental or consequential damages for any reason whatsoever.

COPYRIGHT NOTICE

This manual, including content and artwork is copyright of Hobby Components Ltd and may not be reproduced without written permission. If you paid for or received a copy of this manual from a source other than Hobby Components Ltd, please contact us at sales@hobbycomponents.com